

# Ceenee mini USER MANUAL

# 2010

Hello, my name is Ceenee mini! Thank you for taking me home, it's nice to meet you. I am a network media player that is capable of playing 1080p/720p high definition content. I can play shared content over your network or stream content from online sources. Connect a hard drive, and I can play your movies, music, karaoke, view photos, and flash applications. Let's get set up, so we can start enjoying media!

**Copyright© 2010 All rights reserved**

**Ceenee Inc.**

**Website: [www.ceenee.com](http://www.ceenee.com)**

All rights reserved. No part of this publication may be reproduced, stored in retrieval system, or transmitted, in any form by means of electronics, mechanical, photocopying, recording, or otherwise, without the prior written permission of Ceenee Inc.

# Table of Contents

<b>Product Safety</b> .....	1
<b>Ceenee Technical Support</b> .....	2
<b>Recording your Ceenee Product Information</b> .....	2
<b>Product Overview</b> .....	3
<b>Package Contents:</b> .....	3
<b>Connections</b> .....	3
<b>Getting Started</b> .....	4
<b>Quick Start</b> .....	4
<b>Installation</b> .....	5
<b>Typical connection for Karaoke</b> .....	8
<b>Using the Ceenee mini media player</b> .....	9
<b>Using the Remote Control</b> .....	9
<b>Insert Remote Control Batteries</b> .....	9
<b>Remote Control</b> .....	10
<b>Usage &amp; Navigation</b> .....	11
<b>Menus</b> .....	11
<b>Home</b> .....	11
<b>Videos</b> .....	11
<b>Music</b> .....	13
<b>Photos</b> .....	15
<b>Karaoke</b> .....	16
<b>Applications</b> .....	22
<b>Settings</b> .....	23

<b>1. Video-Audio:</b> .....	23
<b>2. Video</b> .....	26
<b>3. Music</b> .....	27
<b>4. Photo</b> .....	28
<b>5. Karaoke</b> .....	31
<b>6. System</b> .....	34
<b>7. Network</b> .....	36
<b>8. Shared Network</b> .....	37
<b>Codec support</b> .....	39
<b>1. Video Containers</b> .....	39
<b>2. Video Code Format</b> .....	40
<b>3. Audio Containers</b> .....	40
<b>4. Audio Codec Format</b> .....	40
<b>5. Photo Containers:</b> .....	40
<b>Troubleshooting</b> .....	41

# Product Safety

- Follow all instructions.
- Heed all warnings.
- Do not operate the device near water to avoid the risk of electric shock or damage.
- Do not throw, shake, or drop the device, otherwise damage may occur.
- Avoid exposing the product to moisture, high humidity, or dust.
- Do not attempt to repair or service the product yourself. Opening or removing the covers may expose you to the risk of high voltages, electric shock, and other hazards. If repair is required, please contact your dealer and refer all servicing to qualified service personnel.
- Do not touch the power cord during lightning. Avoid handling the power cord during electrical storms to avoid electric shock.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Do not overload power strips or extension cords. Overloading an electrical outlet can result in fire, electric shock, or device damage.
- Never push foreign objects into the device.
- Hold the outer power connector when removing the power cable. Pulling the power cable itself may damage the wires inside the cable, and it can cause fire, or electric shock. Unplug this apparatus when it is not being used for an extended period of time.
- Do not spray chemical at, or near the device.
- Maintain a distance of at least 3 feet between the VO47L FHDTV10A and any heat source, i.e. radiator, heater, oven, amplifier etc.
- Do not install the product close to smoke.
- Do not install in a high heat environment over 95 degrees Fahrenheit.
- Do not use the product in an enclosed environment, or else the device may get damaged.
- Do not touch the connector with wet hands to avoid the risk of electric shock.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Operating environment. Temperature: 40°F ~ 95°F, Humidity: 20% ~ 80% non-condensing.
- For additional safety information, please refer to [www.Ceenee.com](http://www.Ceenee.com).

# Ceenee Technical Support

**Important:** Should you encounter any problem, please do not return this product to the store before carefully reading the user manual. You can also find answers to your technical support questions through our knowledge base or e-mail support service at [support@CeeNee.com](mailto:support@CeeNee.com). If you still need assistance, please visit us at [www.ceenee.com](http://www.ceenee.com)

Your Ceenee product includes 90 days of free technical support during the applicable warranty period for your product. The 90 day period commences on the date of your first telephone contact with Ceenee technical support. To help us keep you informed of new features and services, remember to register your Ceenee product online at <https://www.ceenee.com/index.php?modules=Customers&action=Join&status=New>

## Recording your Ceenee Product Information

In the following table, please write the serial and model numbers of your new Ceenee mini product.

You can find this information on the label on the bottom of the device. You should also note the date of purchase. This information may be required when requesting technical support.

<b>Serial Number:</b>
<b>Model Number:</b>
<b>Purchase Date:</b>
<b>System and Software Notes:</b>

# Product Overview

This user manual provides step-by-step instructions for installing and using your new media player. For the latest Ceenee product information and news, please visit us at [www.Ceenee.com](http://www.Ceenee.com). The CEENEE TV HD Media Player is an ultra-compact, high-definition (HD) USB 2.0 media player that attaches to an entertainment unit through a variety of audio/video interfaces and supports playback of major audio, video, and image file formats. It supports high-definition video playback of up to 1080p through an HDMI connection or standard definition for TVs with lower capabilities. High-fidelity digital audio is supported from an optical interface. A USB port and a SD card slot are available to connect major external storage devices. The included remote control lets you quickly browse through your media library and configure settings.

## Package Contents:

- Ceenee Mini Network Media Player
- AC Adapter
- HDMI Cable
- Composite A/V Cable
- Remote Control
- 2 AAA Batteries
- Quick Start Guide

## Connections

### Front Panel

1. Infrared receiver
2. Power, USB, SD Card LED Lights
3. USB Port
4. SD Card Slot

### Back Panel

1. AC power adapter
2. Optical Digital connector
3. Ethernet Interface connector
4. HDMI port
5. Composite AV

### Connecting devices

1. USB external drive
2. SD/SDHC Card
3. Network storage devices

# Getting Started

## Quick Start

Connect Ceenee Mini media player to your TV or entertainment unit through the desired interface option.

1. Insert the Network cable if applicable.
2. Connect the optical digital cable if applicable.
3. Connect the AC adapter to a wall socket and then to the player.
4. Insert two AAA batteries into the remote control device.
5. Insert a USB drive/a SD card (not included) filled with your favorite movies, music, karaoke songs, flash applications (including games) and photos to the player.
6. Wait a moment for me to search for content, and then enjoy!

## Installation

**Step 1:** Connect Ceenee Mini media player to your TV or entertainment unit through the desired interface option.

The following figures illustrate the cable connections supported by the Ceenee Mini media player. The standard connection uses the included composite AV cables.

### Choosing the Best Connection

The quality of the picture produced by your TV depends on the quality of your TV and its connection to the Ceenee Mini media player.

Connection	Quality	Connections
HDMI	BEST	Specialized, high- definition connector
COMPOSITE	GOOD	<ul style="list-style-type: none"><li>• Yellow = video</li><li>• Red = right audio</li><li>• White = left audio</li></ul>



**For High Definition TV**



**For Standard Definition TV**



 
**Step 2:** Insert the network cable



**Step 3:** Insert the optical digital cable



**Step 4:** Connect the AC adapter

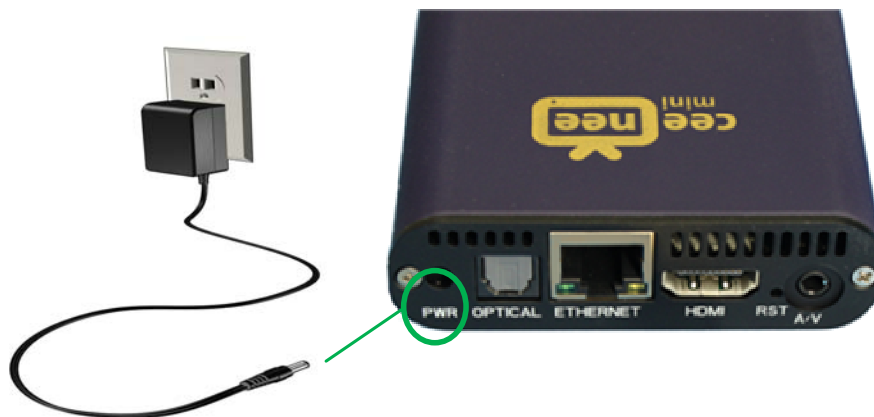

**Step 5:** Connect a USB drive or a SD card

- Connect a USB drive or a SD card to the Ceenee mini media player.



- Please wait a few moments while the Ceenee mini media player scans the USB device or the SD card for the media files. In the case of the USB Devices, this may take a few minutes, depending on the storage capacity of the USB device and the number of available media files. When the external device is detected, the respective status LED turns on and the Home screen displays the new USB directory icon or the SD card icon whichever is applicable.
- Remove the USB Device/SD card  
To prevent data loss, it is highly recommended that you first press the **EJECT** button on the remote control before removing a USB device or a SD card.  
To remove a USB device or a SD card:
  - Press the **EJECT** button on the remote.
  - Select the desired device you want to remove.
  - Highlight **OK** on the eject prompt and then press the **OK** button on the remote.
  - Disconnect the desired device from the Ceenee mini media player.

# Typical connection for Karaoke



# Using the Ceenee mini media player

## Using the Remote Control

The Ceenee mini remote control lets you navigate the Home screen, browse for media files, enable playback options, and customize the system settings. The infrared sensor detects infrared signals from the remote.

 
\*\*\*\*\*

## Insert Remote Control Batteries

1. Remove the battery cover.



2. Insert the batteries corresponding to the (+) and (-) marks on the battery compartment.

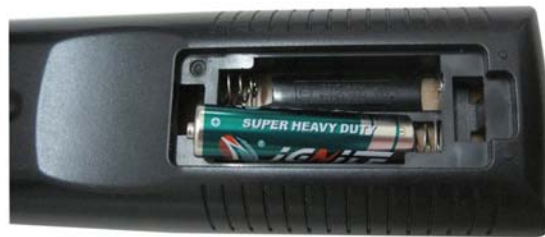


3. Re-attach the battery cover.



# Remote Control

 1. POWER: Switch the power on/off
2. EJECT: Eject-safely an attached folder from shared network: from a USB or a SD card
3. NUMBER PAD: Searches by video/song/photo/application name by alphanumeric keys. Press multiple times on the numeric key cycles through numbers and letters.
4. MENU: Toggle the menu bar
5. DELETE (TITLE): Delete input character or delete a queue song in Karaoke
6. VOL +/-: Volume Up/Down adjustment
7. MUTE: Turn the sound on/off
8. AUDIO: Select audio channel
9. ►►: Next track
10. ◄◄: Previous track
11. HOME: Exit back to the homepage
12. RETURN: Navigate back to the previous screen
13. 4 WAY NAVIGATION ARROWS: Navigate through the menu
14. OK: To choose a selection
15. INFO: Display main/sub-screen picture source
16. TIME SEEK: Play at time which is being selected

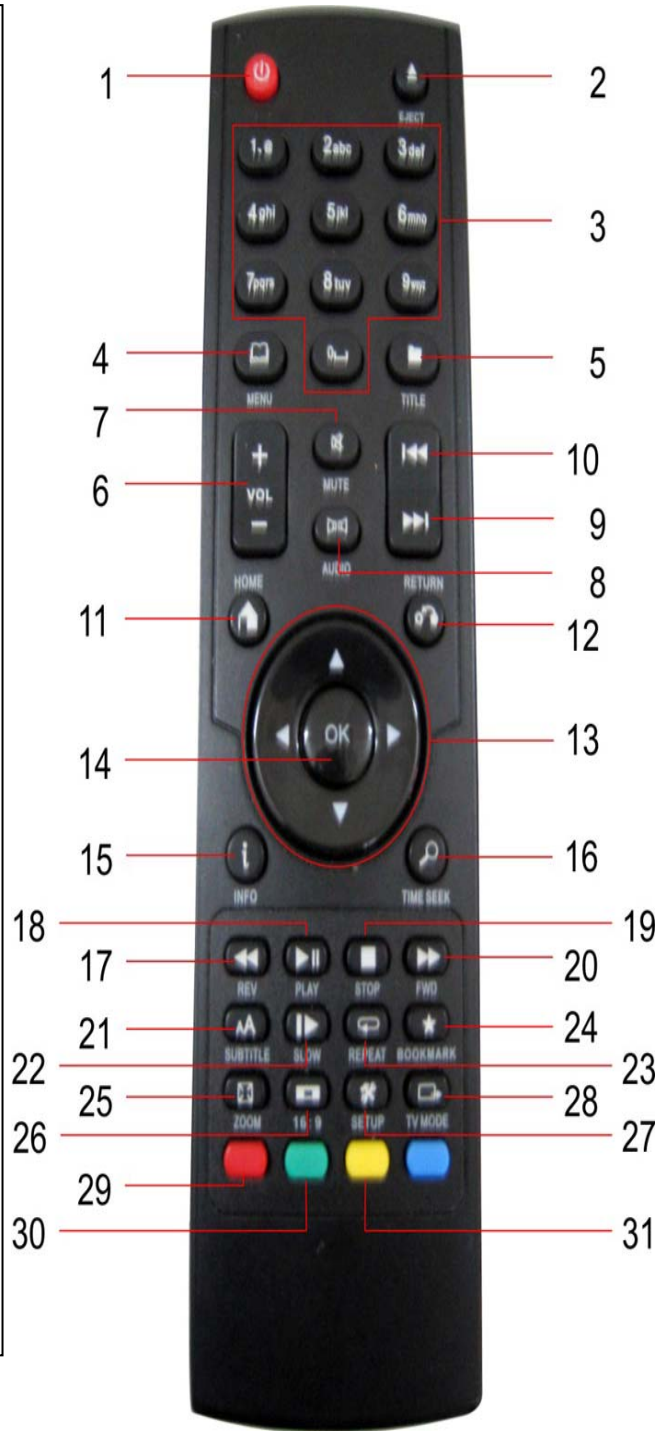

17. REV: Backward
18. PLAY: Play/Pause
19. STOP: Halt play and return to the list
20. FWD: Forward
21. SUBTITLE: Switch subtitles
22. SLOW: Do not support
23. REPEAT: Switch modes: Normal, Repeat One, Repeat All, Shuffle, Repeat All and Shuffle
24. BOOKMARK: Do not support
25. ZOOM: Zoom frame (support only video and photo)
26. 16:9: Switch Aspect ratio: Normal/Widescreen
27. SETUP: Go to Settings interface
28. TV Mode: Do not support
29. ROTATE: Rotate the photo's frame
30. MOVE: Move frame (support only video and photo)
31. RESTORE: Restore original status for the frame (support only video and photo)

# Usage & Navigation

## Menus

Use the 4-way arrows on the remote control to navigate through the menu. Press the “OK” button to select a feature, and then press the “RETURN” button to go back.

Turn on the Ceenee OMP Player for the first time may take a few moments for the Navigation Home to display.

**Ejecting a Disk:** Press the “EJECT” button on the remote control.

 
## Home

The navigation is split into several parts. The left side of the screen shows Video, Music, Photo, Karaoke, Applications and Settings. The center shows RSS feeds, and the right side shows time, weather, and stock.




## Videos

1. Playing a movie: select the “Video” button in the Ceenee Mini homepage, and then press the “OK” or ”PLAY” button on the remote to select a video
2. Organizing videos: Folder, All Videos, Recent, and Search

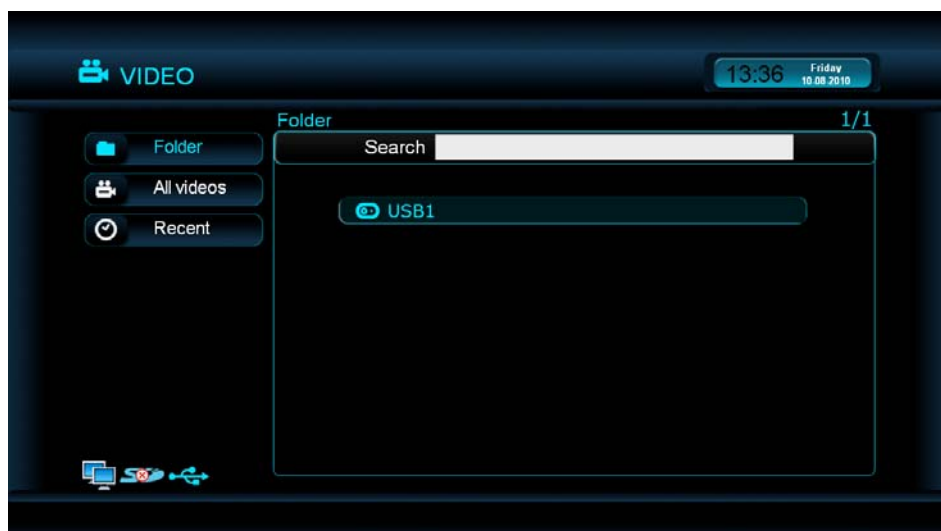

3. Press the “OK”, “PLAY” or “RIGHT ARROW” button and then select a USB, a SD card or shared directories from a Local Network
4. Searching: Use the NUMBER PAD and press “OK” to search. Press the “DELETE” button if you need to delete a character in the search box
5. Press the ►► or ◀◀ button to display the next/previous page in the video list
6. Press “OK”, “PLAY” or “RIGHT ARROW” button on the remote to play a video
7. Video Playback Menu:
  - a. When playing a video, if program displays “Resume?” message:
    - Press “YES” to start playing the video again after being interrupted
    - Press “NO” to play the video from scratch
  - b. Press the “INFO” button to bring up the playback options such as fast forward, pause, play, and stop

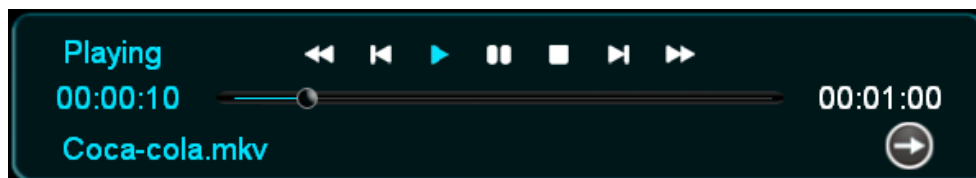 

- c. Press the “MENU” button to bring up the selections such as Audio Channel, Subtitles, Zoom in, Zoom out, Move, Restore, and Repeat



- d. Press the ►► or “RIGHT ARROW” button to play the next video
    - e. Press the ◀◀ or “LEFT ARROW” button to play the previous video
    - f. Press the “FWD” button to fast forward the video
    - g. Press the “REV” button to backward the video
    - h. Press the “PLAY” button to play/pause the video
    - i. Press the “STOP” button to stop the video
    - j. Press the “TIME SEEK” button to play the video at time which is being selected
    - k. Press the “MUTE” button to turn the sound on/off

- l. Press the “VOL+/- ” to adjust volume up/down
- m. Press the “AUDIO” button:  
Depending on the media, if containing more than one soundtrack you can press the audio button to select accordingly.  
While playing a video, either press only AUDIO button or press AUDIO with “LEFT, RIGHT, UP or DOWN ARROW” to select the available soundtrack.  
It may take a few seconds to change audio track because it has to sync.
- n. Press the “SUBTITLE” button and use the “LEFT, RIGHT, UP or DOWN ARROW” button to switch the subtitles
- o. Press the “REPEAT” button and use the “LEFT, RIGHT, UP or DOWN ARROW” button to switch modes: Normal, Repeat One, and Repeat All
- p. Press the “ZOOM” and “RIGHT or UP ARROW” button to zoom in the frame or “LEFT or DOWN ARROW” button to zoom out the frame
- q. Press “16:9” button to switch Aspect ratio: Normal/Widescreen
- r. Press the “GREEN” button and 4-way arrows to move the frame up/down/left/right
- s. Press the “YELLOW” button to restore the original status
- t. Press the “SETUP” button to go to SETTINGS interface
- u. Press the “RETURN” button to go back to the previous screen
- v. Press the “HOME” button to exit back to the homepage

## Music

1. Playing music: select the “Music” button in the Ceenee Mini homepage, and then press “OK” or “PLAY” button on the remote to select the music
2. Organizing music: Folder, All Music, Recent, Album, Genre, Artist, and Search



 
3. Press the “OK”, ”PLAY” or “RIGHT ARROW” button to select a USB, or a SD card, or shared directories from Local Network
4. Searching: Use the NUMBER PAD and press “OK” to search. Press “DELETE” button if you need to delete a character in the search box
5. Press the ►► or ◀◀ button to display the next/previous page in the music list



6. Browse to the music to play, and select the song by pressing “OK”, “PLAY” or “RIGHT ARROW” button on the remote
7. Music Playback Menu



- a. Press the ►►► or “RIGHT ARROW” button to play the next music
- b. Press the ◀◀◀ or “LEFT ARROW” button to play the previous music
- c. Press the “FWD” button to forward the music
- d. Press the “REV” button to backward the music
- e. Press the “PLAY” button to play or pause the music
- f. Press the “STOP” button to halt play and return to the list
- g. Press the “MUTE” button to turn the sound on/off
- h. Press the “VOL+/-” to adjust the volume up/down
- i. Press either the “REPEAT” or “MENU” button and then press “OK” to switch modes: Normal, Repeat One, Repeat All, Shuffle, Repeat All and Shuffle

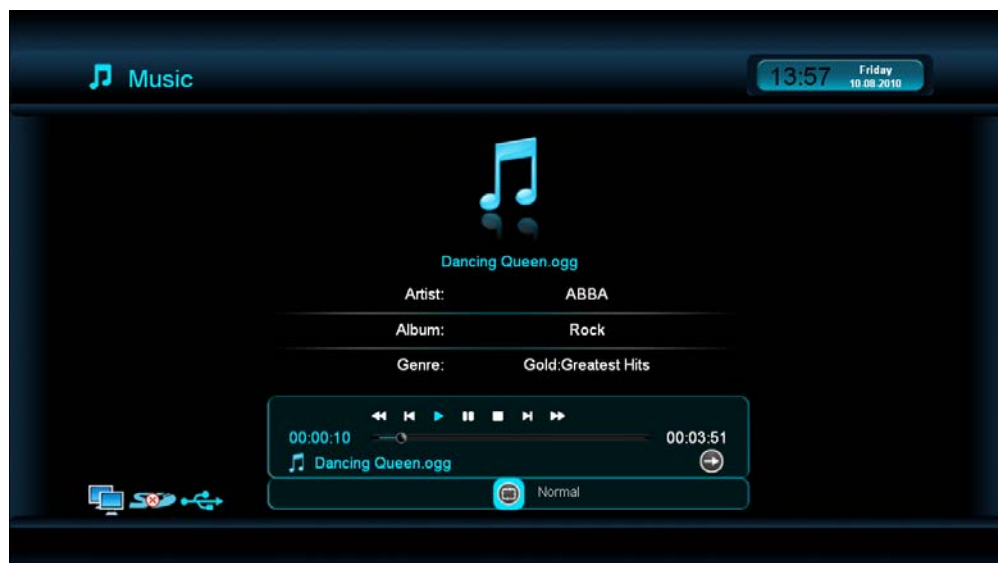

- j. Press the “SETUP” button to go to SETTINGS interface

- k. Press the “RETURN” button to get back to the previous screen
- l. Press the “HOME” button to get back to the homepage

**Note:**

 
- You still can continue to listen to music if you return to HOME page, browse video list, or view a photo.
- When pressing the STOP button, opening a video, going to Karaoke, Applications or Settings, the music will be stopped.

## Photos

1. Viewing photo: select the “Photo” button in the Ceenee Mini homepage, and press “OK” or ”PLAY” button on the remote to select a photo
2. Organizing photo: Folder, All Photos, Recent, Date, and Search



3. Press the “OK”, ”PLAY” or “RIGHT ARROW” button to select a USB, a SD card or shared directories from Local Network
4. Searching: Use the NUMBER PAD and press “OK” to search. Press “DELETE” button if you need to delete a character in the search box
5. Press the ►► or ◀◀ button to display the next/previous page in the photo list
6. Browse to the photo to view, and select the photo by pressing “OK” or “RIGHT ARROW” button on the remote
7. Select the photo on the list and press the “PLAY” button on the remote to view photo slide
8. Photo Playback Menu
  - a. Press the “INFO” button to view photo’s information

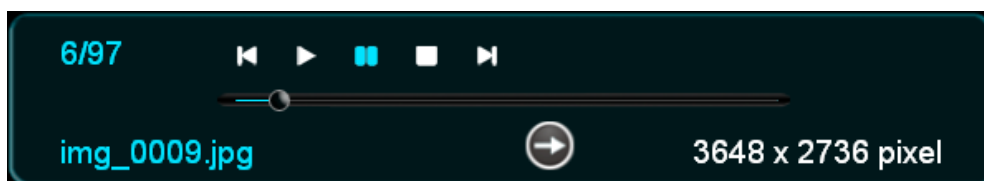

- b. Press the “MENU” button to bring up the selections such as Move, Rotate Right, Rotate Left, Zoom in, Zoom out, Restore and Repeat




- c. Press the ►► or “RIGHT ARROW” button to view next photo
- d. Press the ◀◀ or “LEFT ARROW” button to view previous photo
- e. Press the “PLAY” button to play/pause the photo (when view slide photo)
- f. Press the “STOP” button:
  - To halt play and return to the list
  - If user is viewing photo and listening to music, press the “STOP” button to halt play photo and return to the list, and then press the “STOP” button again to stop the music.
- g. Press the “MUTE” button to turn the sound on/off (if user view photo and listen to music concurrently)
- h. Press the “VOL+/-” to adjust the volume up/down (if user view photo and listen to music concurrently)
- i. Press the “REPEAT” button and use the “LEFT, RIGHT, UP or DOWN ARROW” button to switch modes: Normal, Repeat one, Shuffle, and Repeat All
- j. Press the “ZOOM” button then the “RIGHT or UP ARROW” button to zoom in the photo, or either the “LEFT or DOWN ARROW” button to zoom out the photo
- k. Press the “RED” and then the “LEFT or DOWN ARROW” button to rotate left the photo, or either the “RIGHT or UP ARROW” button to rotate right the photo
- l. Press the “GREEN” button and 4-way arrows to move the photo up/down/left/right
- m. Press the “YELLOW” button to restore the original status
- n. Press the “SETUP” button to go to SETTINGS interface
- o. Press the “RETURN” button to get back to the previous screen
- p. Press the “HOME” button to get back to the homepage

## Karaoke

 The Ceenee Karaoke Player is a full featured sing-a-long player. There are functions to create a song booklet, queue songs, and modify playlists.

### Navigating the Choose Song Menu

1. Playing a Song: Move to the “Karaoke” tab in the Ceenee Mini homepage, and press the “OK” or “PLAY” button on the remote to select “Karaoke” function.
2. If on screen displays the “Empty. Please press SETUP button on remote control” message, you have to go into “Settings/Karaoke/Add resource” to add any folder containing Karaoke files (*go to section “Settings/5.Karaoke” in this Manual to view in details*). Return to Karaoke interface after adding successfully.
3. Select a song from the karaoke song list, and press the “PLAY” button to play.
4. Organizing karaoke: Organize songs by All songs, Folder, Playlist, and Recent

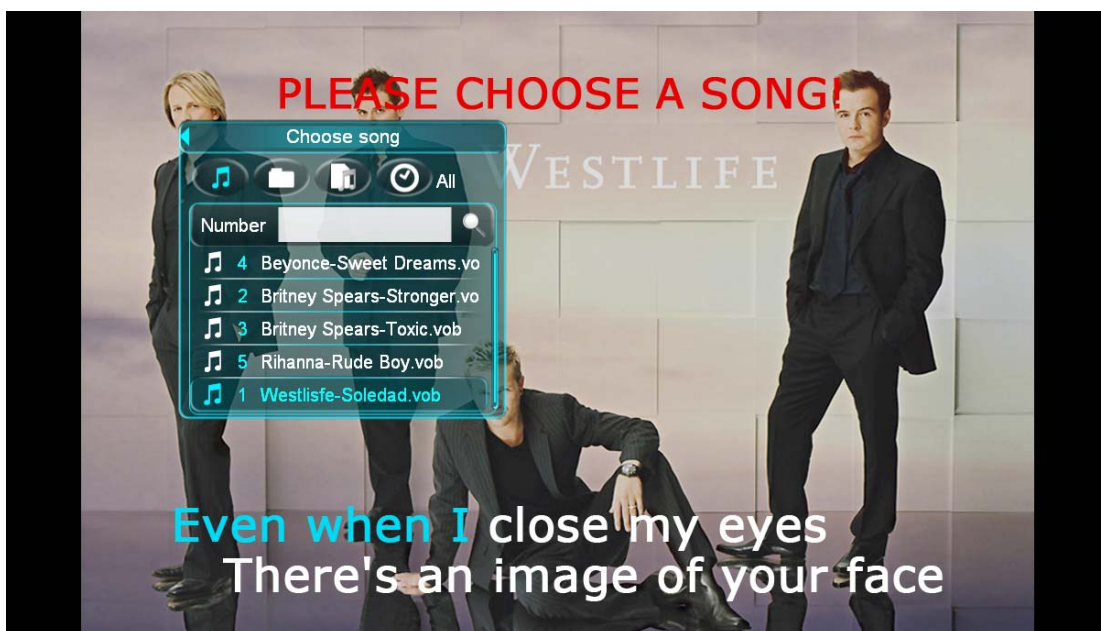


5. Searching:


- a. Quick search: Before finding a song, you must turn off “Choose Song Menu” by pressing the “MENU” button. Next, use the NUMBER PAD and press “OK” to select the song



 - b. Normal search: Press the “MENU” button to display “Choose Song Menu”. Then, press the “LEFT ARROW” button and select **Search Option** tab to expand “Choose Song Menu”.
  - i. Select “Search for song’s number” to type numbers
  - ii. Select “Search for song’s name” to type characters

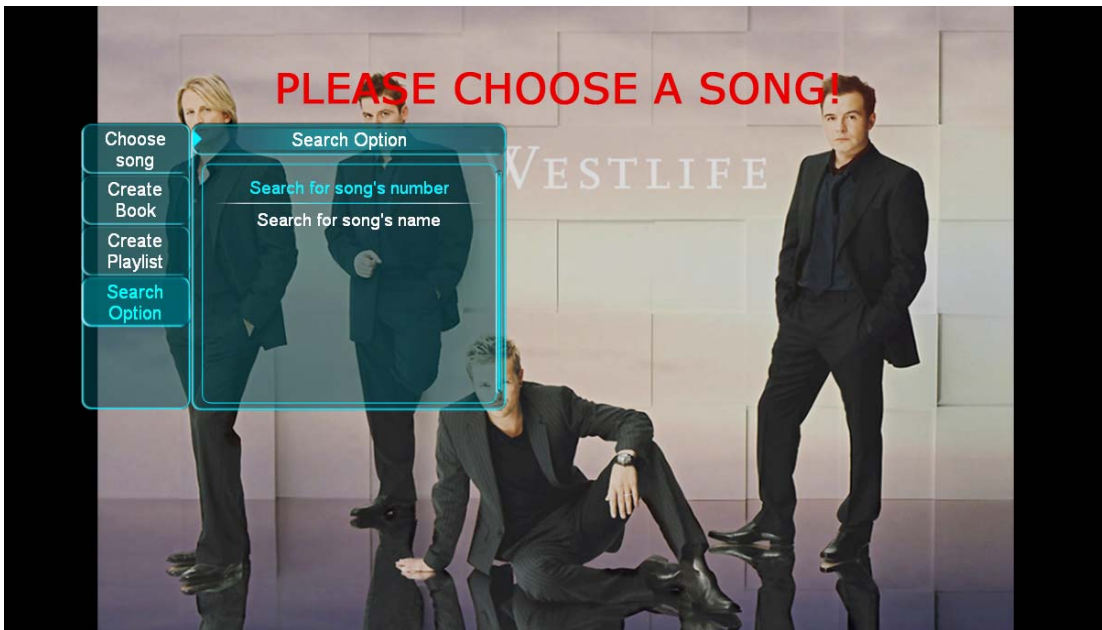

 Return to “Choose Song Menu”, use NUMBER PAD and press “OK” button to search. If you need to delete the input text in search box, press “DELETE” button.

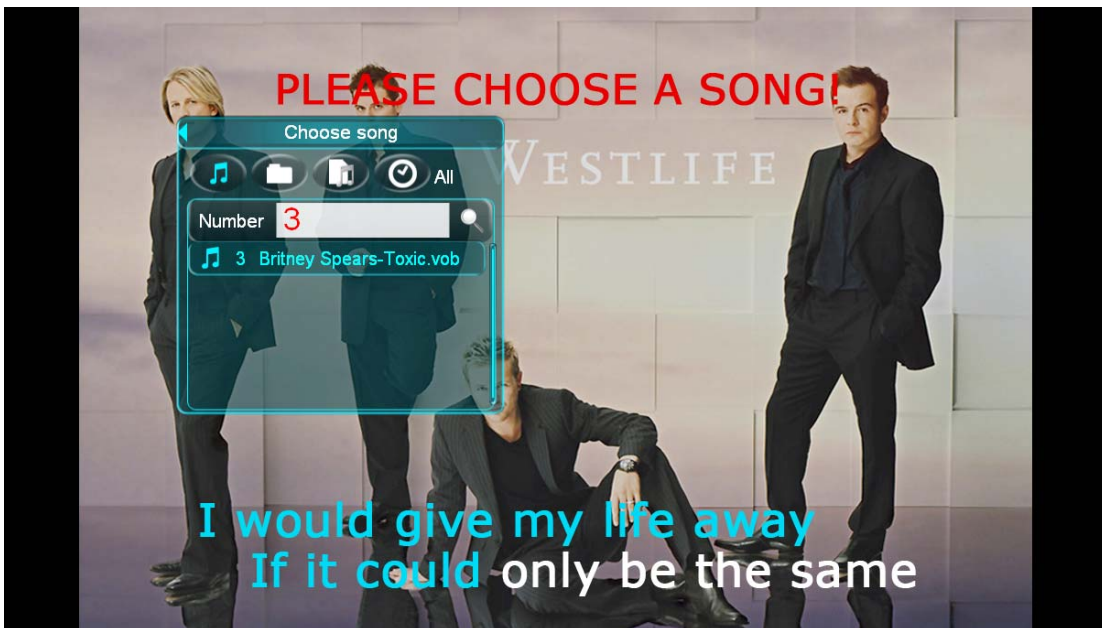

*After selected “Search for song’s number” option*




*After selected "Search for song's name" option*


6. Create Book: press the "MENU" button to display "Choose Song Menu". Then, press the "LEFT ARROW" button to expand the "Choose Song Menu". Select the "Create Book" tab will enable the user to save and update a Karaoke song book, which the user can print out.
  - a. Update book: Assign ID for new songs and update them into the end of existing book
  - b. Update data, don't save book: Assign ID for new songs but don't update them into the existing book
  - c. Create new book: Create a printable Excel file with the song number and song title, which the user can then print—the file will be saved in the location specified by the user. This song book is helpful in browsing/queuing songs while others are singing. A song book only includes all songs in active devices.

**Note:**

 
- After creating or updating book, you must unplug the device that contains book by pressing the "EJECT" button to protect data.

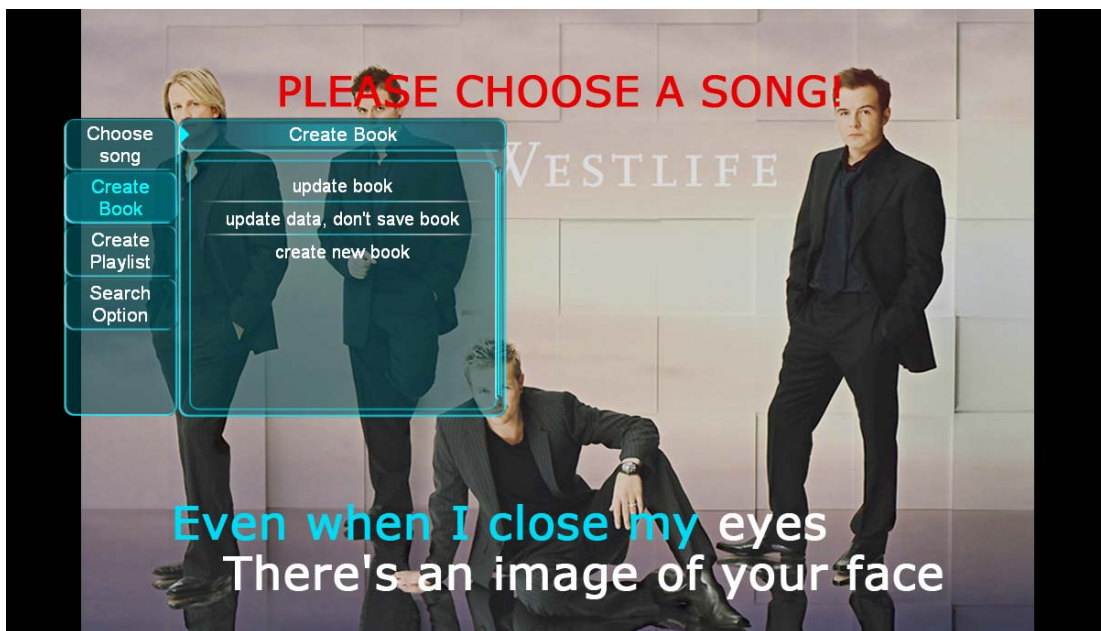

 7. Create Playlist: press the "MENU" button to display "Choose Song Menu". Then, press the "LEFT ARROW" button to expand the "Choose Song Menu". Select the "Create Playlist" tab, press the "RIGHT ARROW" button, select "Create new playlist" and press "OK" button will enable the user to save and update a song list to play.

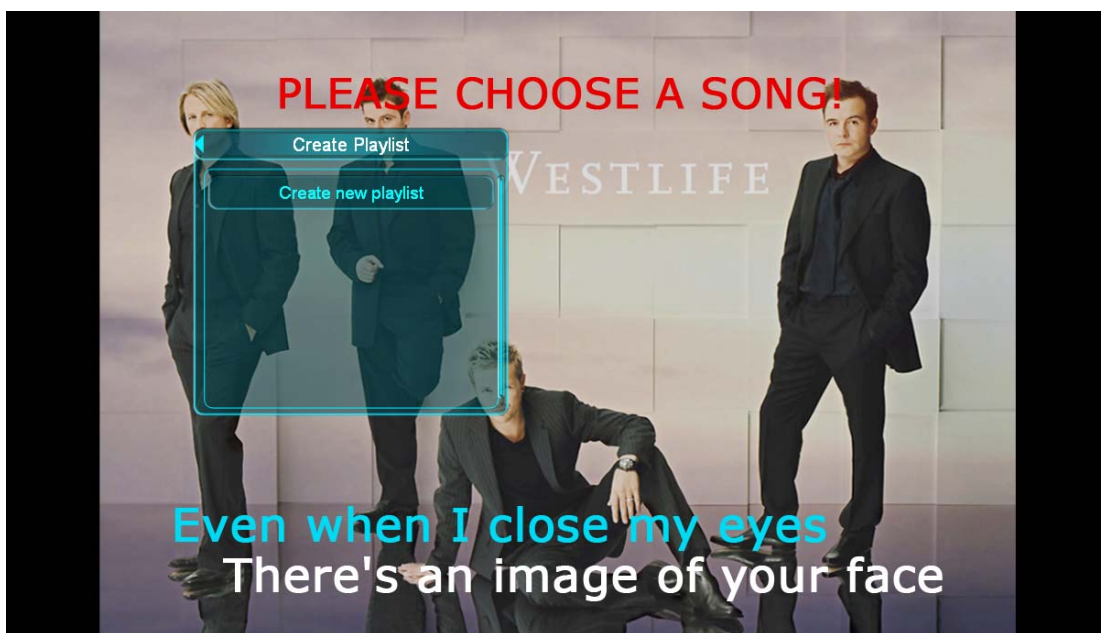

 
Select a song and press "OK" button to insert it into the playlist. After that named your playlist.

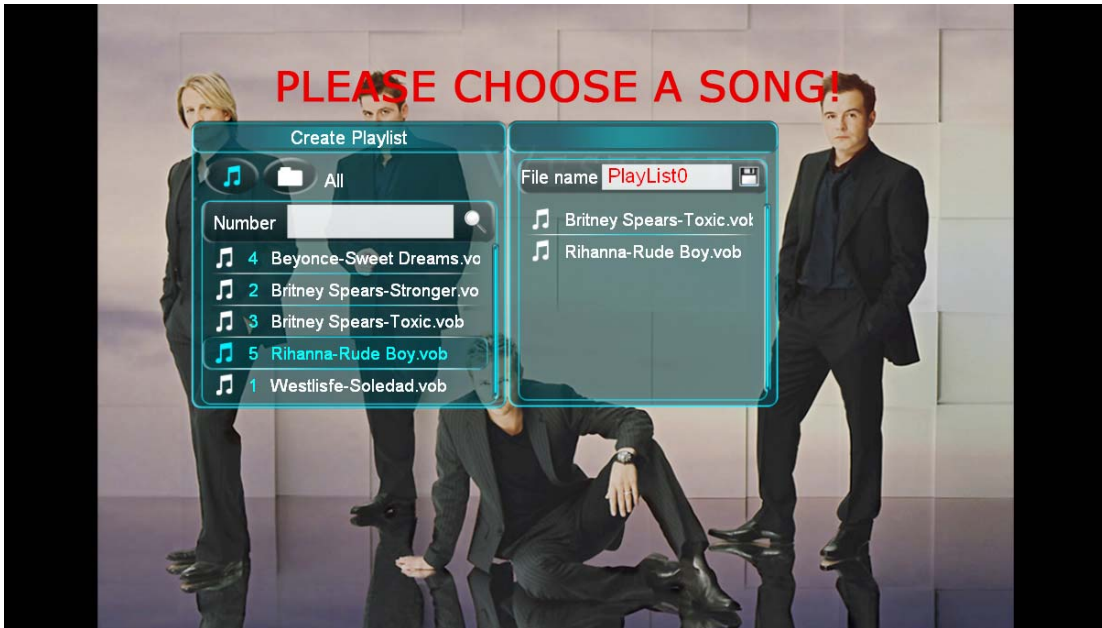

Save the playlist, go back to the main menu, and select the playlist icon to choose a playlist.

At the “Create Playlist” interface, press the “RIGHT ARROW” button to choose a playlist:

 
- Press “OK” button if you need to rename or change its content
- Press “DELETE” button to delete it

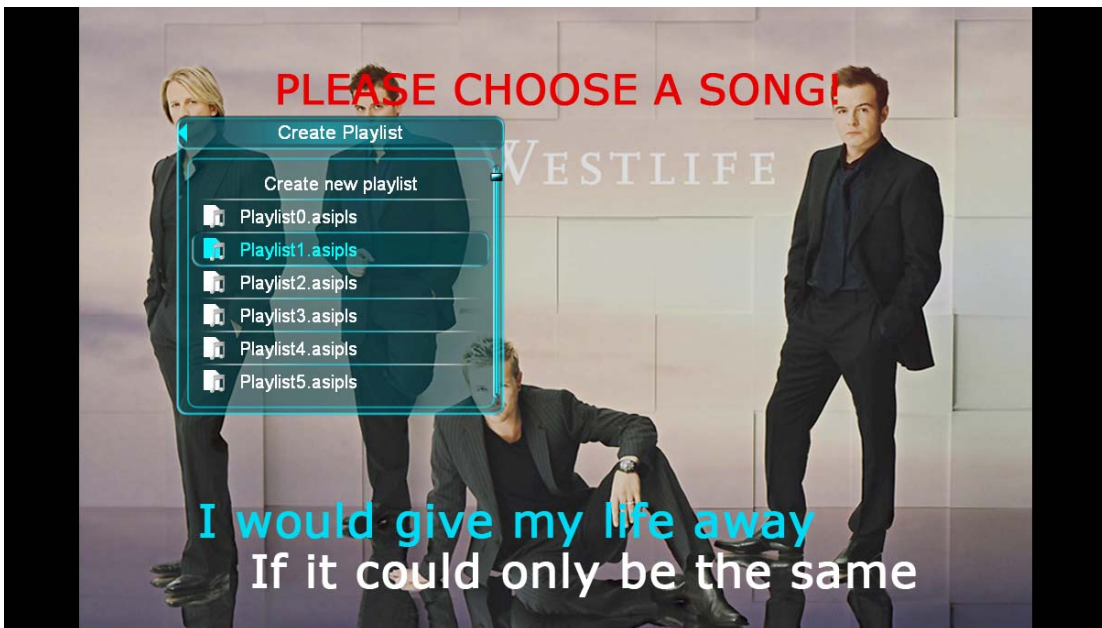

8. To insert a song to the top of queue songs:
  - After everyone has selected his/her song from the Choose Song Menu, a list of songs will appear on the top screen. Then use the “LEFT or RIGHT ARROW” button to move the yellow rectangle to the song which you wish to insert and press “OK”
9. To delete a song on queue songs:



 - Select a song on queue songs by using the “LEFT or RIGHT ARROW” button and press the “DELETE” button

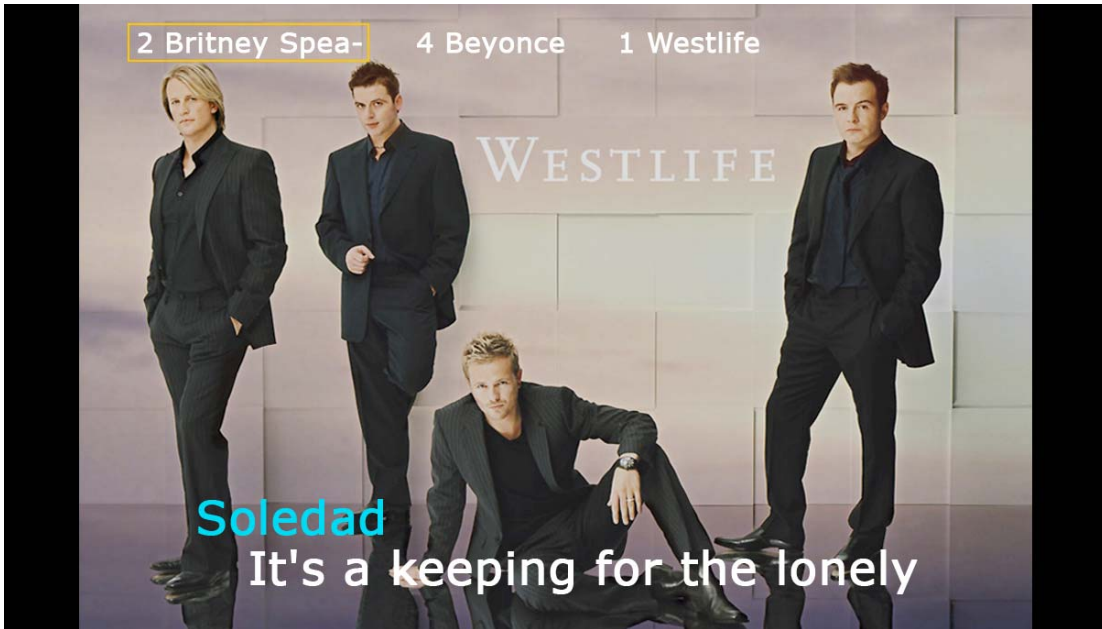

#### 10. Karaoke Playback Menu

- Press the “MENU” button to toggle on/off the “Choose Song Menu”
- Press the “MUTE” button to turn the sound on/off
- Press the “VOL+/-” to adjust the volume up/down
- Press the “AUDIO” button to select an Audio Channel
- Press the ►► button to play the next song in the queue
- Press the “PLAY” button to play/pause the current song
- Press the “STOP” button to stop playback
- Press the “FWD” button to fast forward the current song
- Press the “REV” button to backward the current song
- Press “16:9” button to switch Aspect ratio: Normal/Widescreen
- Press the “GREEN” button and 4-way arrows to move the frame up/down/left/right
- Press the “SETUP” button to go to SETTINGS interface
- Press the “RETURN” button to go back to the previous screen
- Press the “HOME” button to exit back to the homepage

## Applications

The applications display flash game with format “.swf” on USB or SD card or shared directories from Local Network. We will continue to develop the applications on our hardware such as games, so you can download from our website and play on the Ceenee Mini.

1. Playing application: Select the “Applications” button in the Ceenee Mini homepage, and press the “OK” or “PLAY” button on the remote to select an application

2. Organizing application: Folder, All, and Search
3. Press the “OK”, “PLAY” or “RIGHT ARROW” button to select a USB, a SD card, or shared directories from Local Network
4. Searching: Use the NUMBER PAD and press “OK” button to search. Press “DELETE” button if you need to delete a character in the search box.
5. Press the ►► or ◀◀ button to display the next/previous page in the application list
6. Browse to the application to play, and select the application by pressing the “OK” or “RIGHT ARROW” button on the remote
7. Application Menu
  - a. Press the “RETURN” button to get back to the previous screen
  - b. Press the “HOME” button to get back to the homepage



## Settings

Two methods for Settings interface:

- a. Select the “Settings” button in the Ceenee Mini homepage, and press the “OK” or ”PLAY” button on the remote control
- b. Press the “SETUP” button anywhere except when you are viewing the Application section.

The “Settings” menu has options to change features and settings in the Ceenee Mini.

### 1. Video-Audio:

The menu and submenu can change the output of Video and Audio.

 
To access the submenus on the right: Use the 4-way arrows on the remote, press the “RIGHT ARROW” button and select “Video output,” “Resolution,” etc.

The Video, Music, and Photo menu change the way how the content is played back.

- a. **Video Output:** Change the output of video between HDMI and Composite. Default is “HDMI”.



- b. **Resolution:** Change the size of the screen from 480i all the way to 1080p. Default is “Auto”.

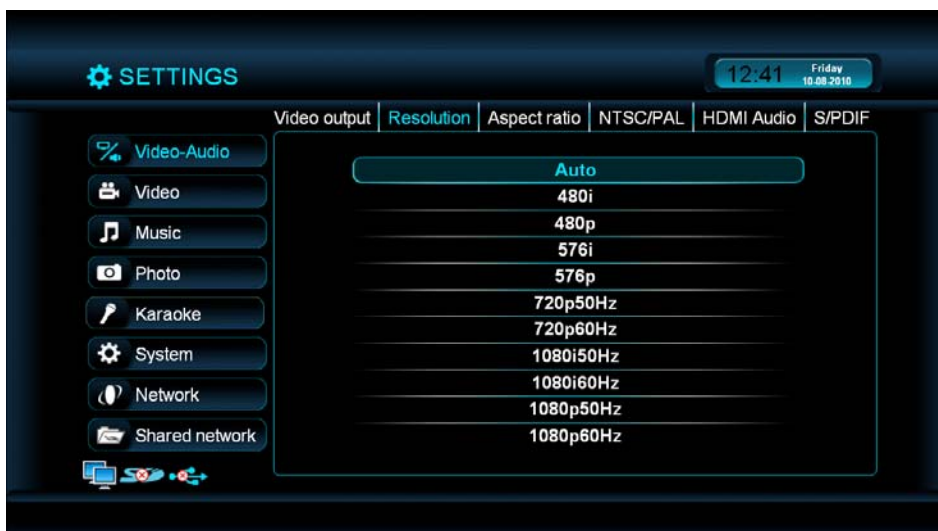

- c. **Aspect Ratio:** Change the screen format to either 4:3 “Normal” or to 16:9 “Widescreen”. Default is “Widescreen”.



- d. **NTSC/PAL:** American Television is displayed in NTSC format—this is default if the Ceenee Mini was purchased in America. PAL is default for Asian and European countries.

 


- e. **Digital Audio Output:** includes two parts

+ **HDMI Audio:** change the audio format to either PCM or Bit Stream. PCM is for stereo sound, and Bit Stream is for pass through digital audio, especially for DTS movies and/or Dolby digital movies. Default is “PCM”.



+ S/PDIF Audio: (Sony/Philips Digital Interconnect Format) is for optical sound. It is used for transporting high quality digital audio signals on transmit or receive. You have two options when you select S/PDIF: PCM or Bit Stream. PCM is for stereo sound; Bit Stream is for pass through digital audio, especially for DTS movies and/or Dolby digital movies. Default is “PCM”.

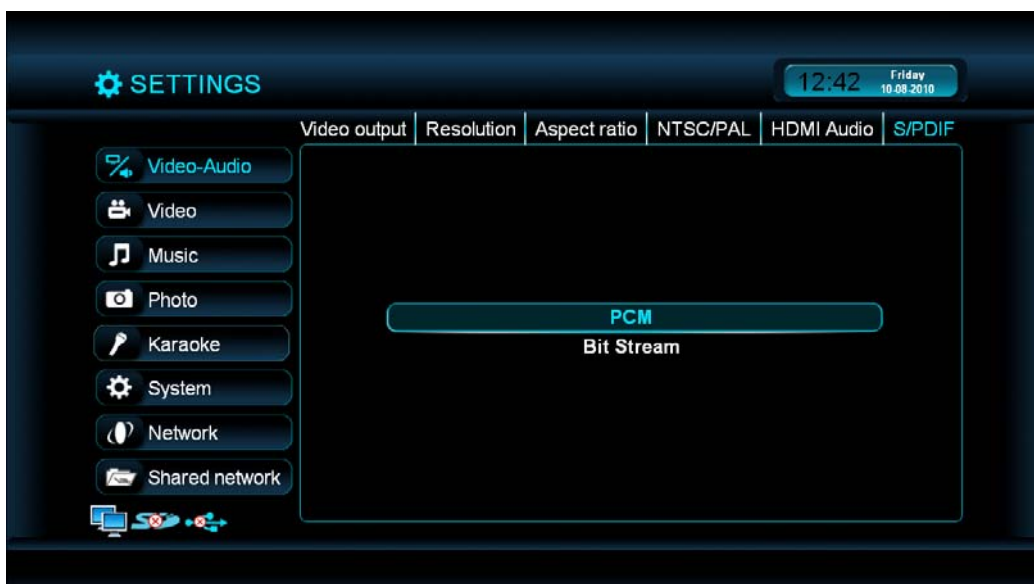

## 2. Video

- a. **Video sequence:** Adjust the frequency of video playback to either play just once, or repeat. Default is “Normal”.



- b. **Video Recent:** Store history of the viewed videos. This can be turned on or off. Default is “Off”.



### 3. Music

- a. **Music sequence:** Adjust the frequency of music playback to Normal, Repeat One, Repeat All, Shuffle, Repeat All and Shuffle. Default is “Normal”.



- b. **Music Recent:** Store history of the viewed songs. This can be turned on/off. Default is “Off”.



#### 4. Photo

- a. **Sequence:** Adjust the frequency of photo playback to Normal, Shuffle, Repeat All, Repeat All and Shuffle. Default is “Normal”.



- b. **Photo scaling:** Option to enlarge photo to fill the screen. Default is “Fit to screen”.



- c. **Transition effect:** Enable fade-out between photos during photo slideshow playback. Default is “Normal”.





- d. **Interval:** Define the amount of time between playbacks of photos. Default is “5 seconds”.



 
- c. **Photo Recent:** Store history of the viewed photos. This can be turned on/off. Default is “Off”.



## 5. Karaoke

- a. **Add resource:** Option to add folders containing karaoke files



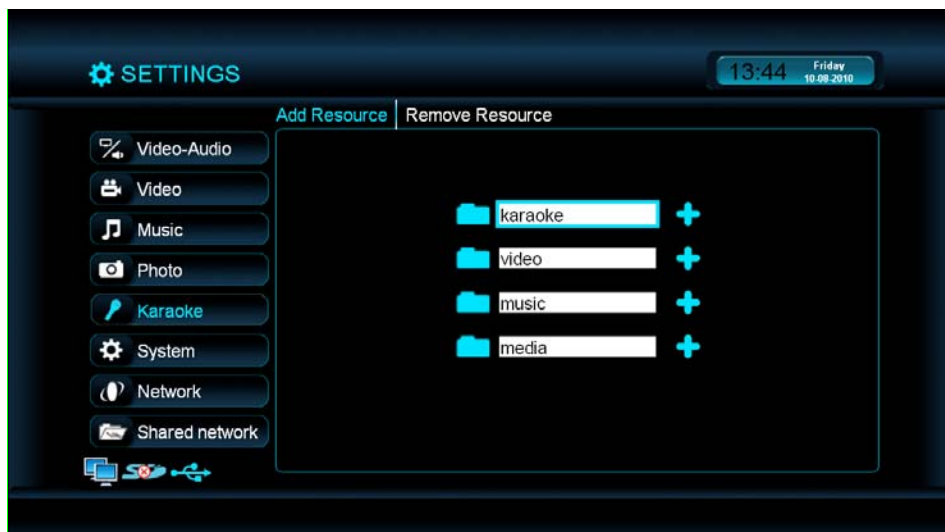

b. **Remove resource:** Option to remove folders which were added previous



## 6. System

 
- a. **Language:** Option to change the languages: English, Vietnamese, and Spanish



- b. **Screensaver delay:** Set the amount of time before the screensaver is turned on. Default is “10 minutes”.



- c. **Update firmware:** Download the firmware and upgrade the device to the most current firmware. Default is “Update now”.

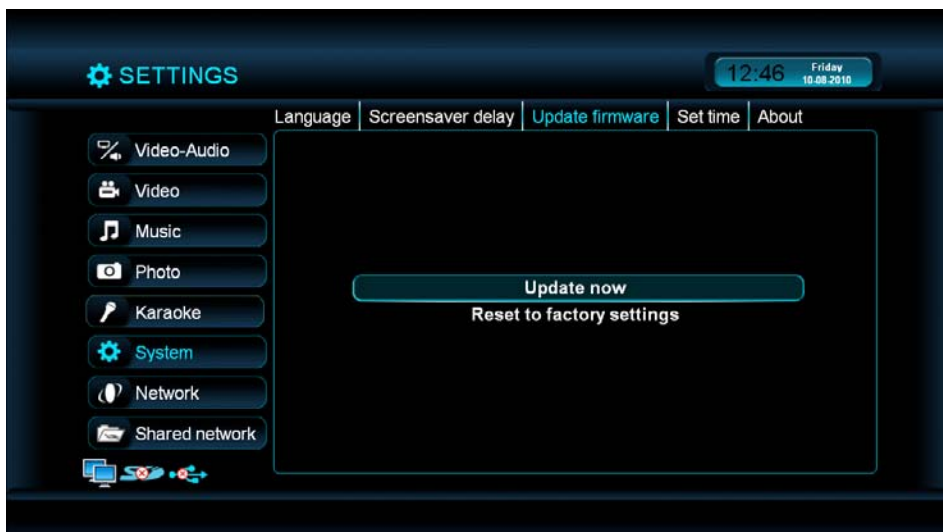

d. **Set time:** Display time on the Clock



e. **About:** Describe the product, firmware, and Linux version



## 7. Network

- a. **Wire IP:** To change the method of IP address retrieval to either “On” (DHCP) or “Off” (Static). First, select “Mode Auto IP” and then press the “OK” button on the remote to switch between “On” and “Off.” To change the “IP Address” and other settings, select the settings, press “OK,” and then use the onscreen keyboard to enter the numbers.



- b. **Time:** Adjust the “Time Zone” to match the user’s local time. “Time Server” is the location the time is updated from.



- c. **Stock:** Information about stock index will be displayed on the Home page. To change stock index, press the “OK” button and enter the stock index which you wish to replace.



d. **RSS:** Information about RSS is displayed on the Home page

- Adding RSS: to add a RSS feed for Home page, press the “OK” button, enter the link which you wish, and select **Apply** tab.

- Removing RSS: to remove an existing RSS on Home page, press the “OK” button will display a link and the link will change if you continue to press the “OK” button. Select **Apply** tab to remove the link which you chose.



## 8. Shared Network

- a. Requirement: enable windows file sharing over the network.
- b. There are two ways to get directory from shared network:
  - ✓ Way 1: Enter location, username, and password directly.





- ✓ Way 2: Browse through your network to your shared computer to share a folder. Enter the Username and Password for your shared folder.

 
Step 1: Select a work group



Step 2: Select a Computer



Step 3: Select a directory and enter Username, Password to add it.

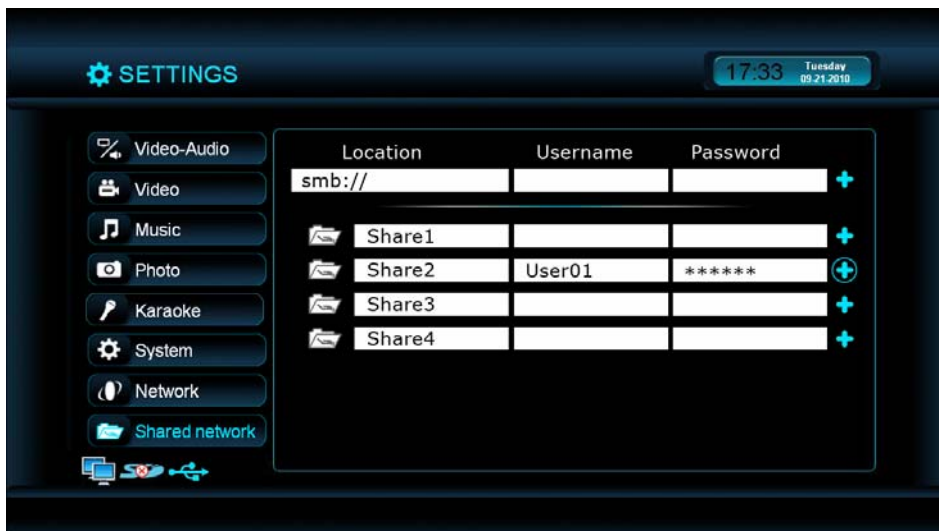

## Codec support

### 1. Video Containers

- MPEG1/2/4 Elementary (M1V, M2V, M4V)
- MPEG1/2 PS (M2P, MPG, DAT, VOB)
- MPEG2 Transport Stream (TS, TP, TRP, M2T, M2TS, MTS)
- AVI, ASF, WMV
- Matroska (MKV)
- MOV (H.264), MP4, RMP4
- FLV (only support H264)

## 2. Video Code Format

- XVID SD/HD
- MPEG-1
- MPEG-2 MP@HL
- MPEG-4.2 ASP@L5, 720p, 1-point GMC
- MPEG-4.10 (H.264)
- BP@L3
- MP@L4.0
- HP@L4.0
- HP@L4.1
- WMV9
- MP@HL
- SMPTE 421M (VC-1)
- MP@HL
- AP@L3

## 3. Audio Containers

- AAC, M4A
- MPEG audio (MP1, MP2, MP3, MPA)
- WAV
- FLAC
- OGG

## 4. Audio Codec Format

- DTS
- Dolby
  - Dolby Digital
  - Dolby Digital Plus
  - Dolby TrueHD
- MPEG
- AAC, HE-AAC
- DRA
- FLAC

## 5. Photo Containers:

- JPEG, BMP, PNG, GIF

## Troubleshooting

Problem	Solution
<b>DISPLAY</b>	
The TV screen is blank and the Ceenee player power LED remains off..	<ul style="list-style-type: none"> <li>• Make sure the TV is turned on.</li> <li>• Make sure that the power adapter and power outlet are okay.</li> <li>• Make sure that the interface cable is properly attached to the correct terminals on both the TV and the Ceenee player.</li> </ul>
The TV screen is blank and the Ceenee player power LED is ON.	<ul style="list-style-type: none"> <li>• Make sure the TV is turned on.</li> <li>• Make sure that the interface cable is properly attached to the correct terminals on both the TV and the Ceenee player.</li> <li>• Press the reset button for 10 seconds.</li> </ul>
The TV screen is blinking and fuzzy.	<ul style="list-style-type: none"> <li>• Make sure that the interface cable is properly inserted on both the TV and the Ceenee player.</li> <li>• Make sure the Ceenee player power LED is on.</li> <li>• If you are using a standard definition TV, Make sure that the <b>Composite</b> option is selected as the video output.</li> <li>• If you are using an LCD TV, Make sure that the <b>HDMI</b> option is selected as the video output.</li> <li>• Make sure that the video resolution option is set as <b>Auto</b>.</li> <li>• Make sure the TV system setting matches the system used in your region.</li> </ul>
The pictures are distorted on display screens.	<ul style="list-style-type: none"> <li>• Navigate to the Settings   Photo and select Keep as original or Fit to screen in the Photo Scaling field</li> </ul>
<b>FILES</b>	
Some of the media files do not play.	<ul style="list-style-type: none"> <li>• Verify compatibility of the media file with the Ceenee player. Refer to “Supported formats” in user manual.</li> </ul>
<b>AUDIO</b>	
There is no sound.	<ul style="list-style-type: none"> <li>• Make sure the volume on the entertainment unit is not muted.</li> <li>• Make sure the correct audio output setting is selected.</li> <li>• If you are using an optical and/or HDMI connection, make sure the entertainment unit is</li> </ul>

	capable of processing bit streams otherwise PCM <b>setting</b> should be selected.
<b>USB DEVICE</b>	
The attached USB device is not visible on the Home screen.	<ul style="list-style-type: none"> <li>• Ceenee Network Media Player only supports mass USB storage mode. Make sure that the USB device is configured as a "mass storage device."</li> <li>• Make sure the USB device's file system is supported (NTFS, FAT/FAT32)</li> </ul>
<b>REMOTE CONTROL</b>	
The Ceenee player remote control does not work.	<ul style="list-style-type: none"> <li>• Press only one button at a time.</li> <li>• Make sure the batteries are properly inserted.</li> <li>• The batteries may already be drained out. Replace batteries with new ones.</li> <li>• Make sure that the path between the remote control and the Ceenee player is not blocked.</li> </ul>